

**Figure 1**  
**(Prior Art)**

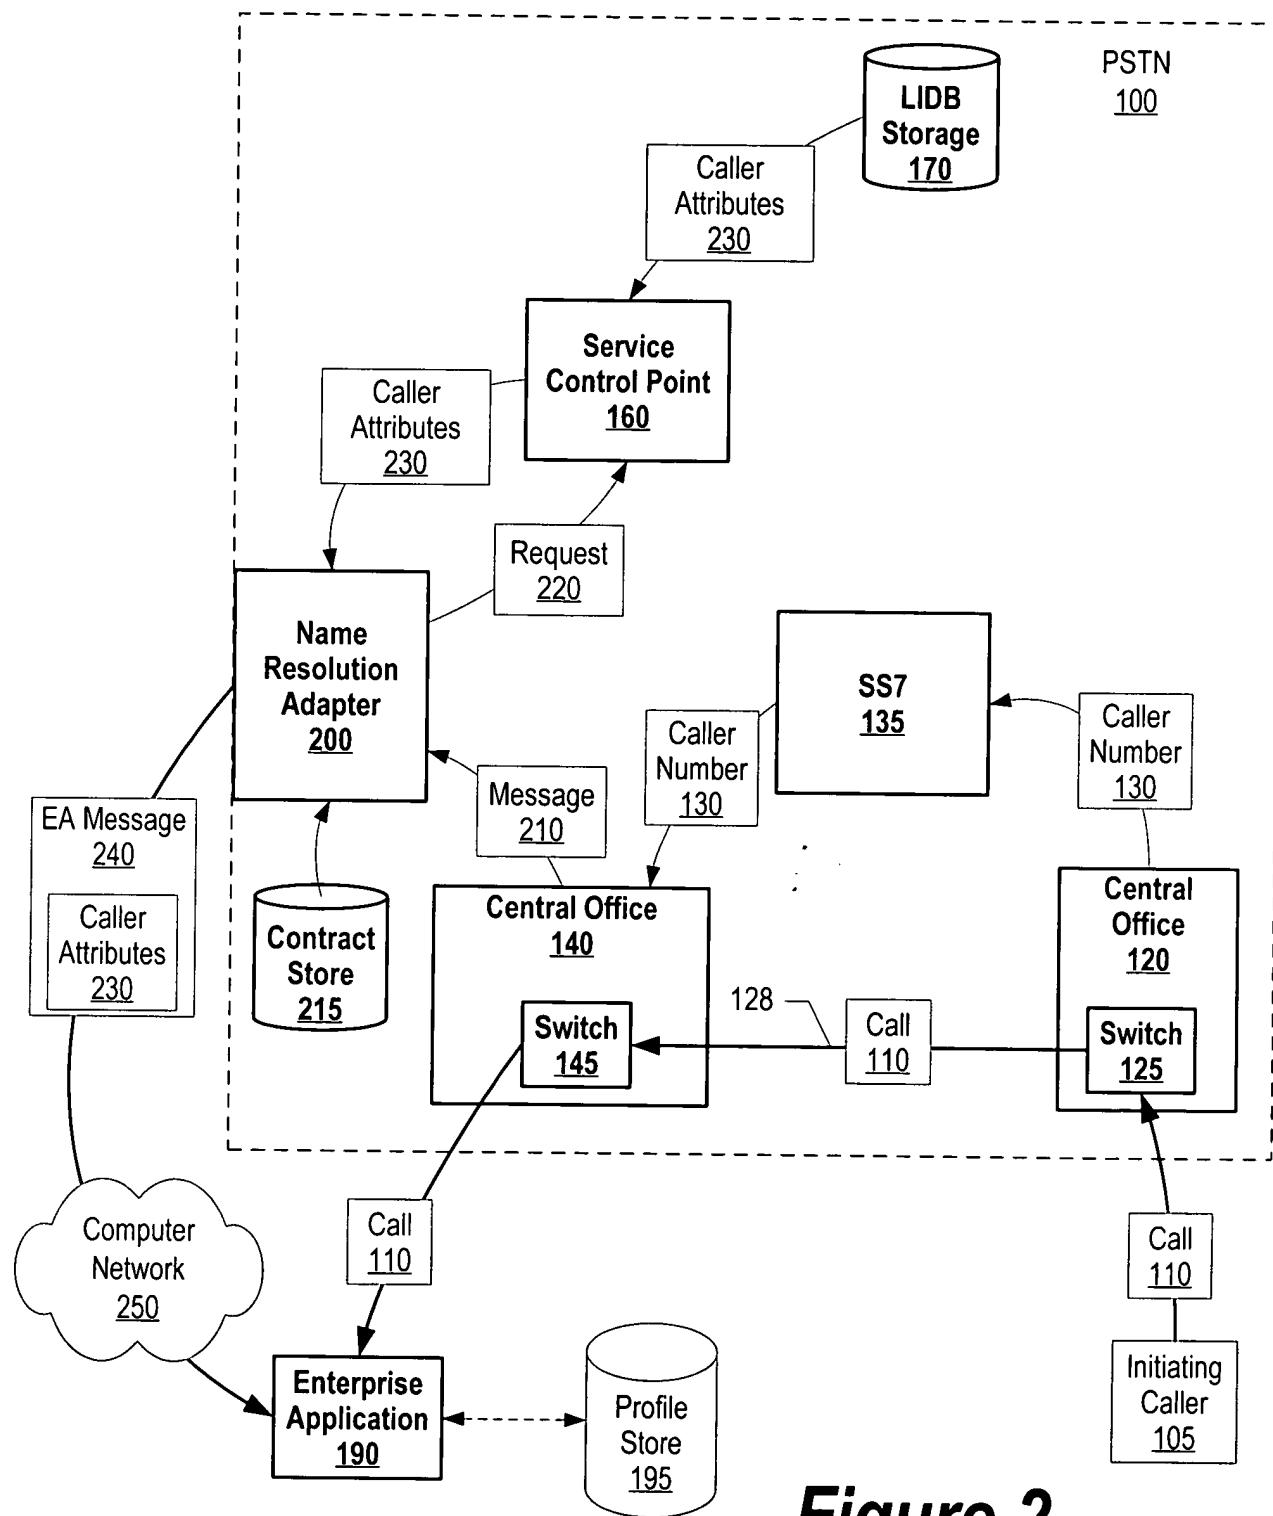
**Figure 2**

Figure 3A shows a table of caller information with five columns: Initiating Caller Number, Name, Address, Alternate Billing, and Service Preferences. The table has four rows of data. Callout numbers 300 through 340 point to specific fields in the table rows. Callout 300 points to the top row header. Callouts 305, 310, 315, 320, and 325 point to the column headers for Initiating Caller Number, Name, Address, Alternate Billing, and Service Preferences respectively. Callouts 330, 335, and 340 point to the first three data rows. Callout 330 points to the Initiating Caller Number column of the first row. Callout 335 points to the same column for the second row. Callout 340 points to the same column for the third row. Callouts 305, 310, 315, 320, and 325 also point to the corresponding columns in the data rows.

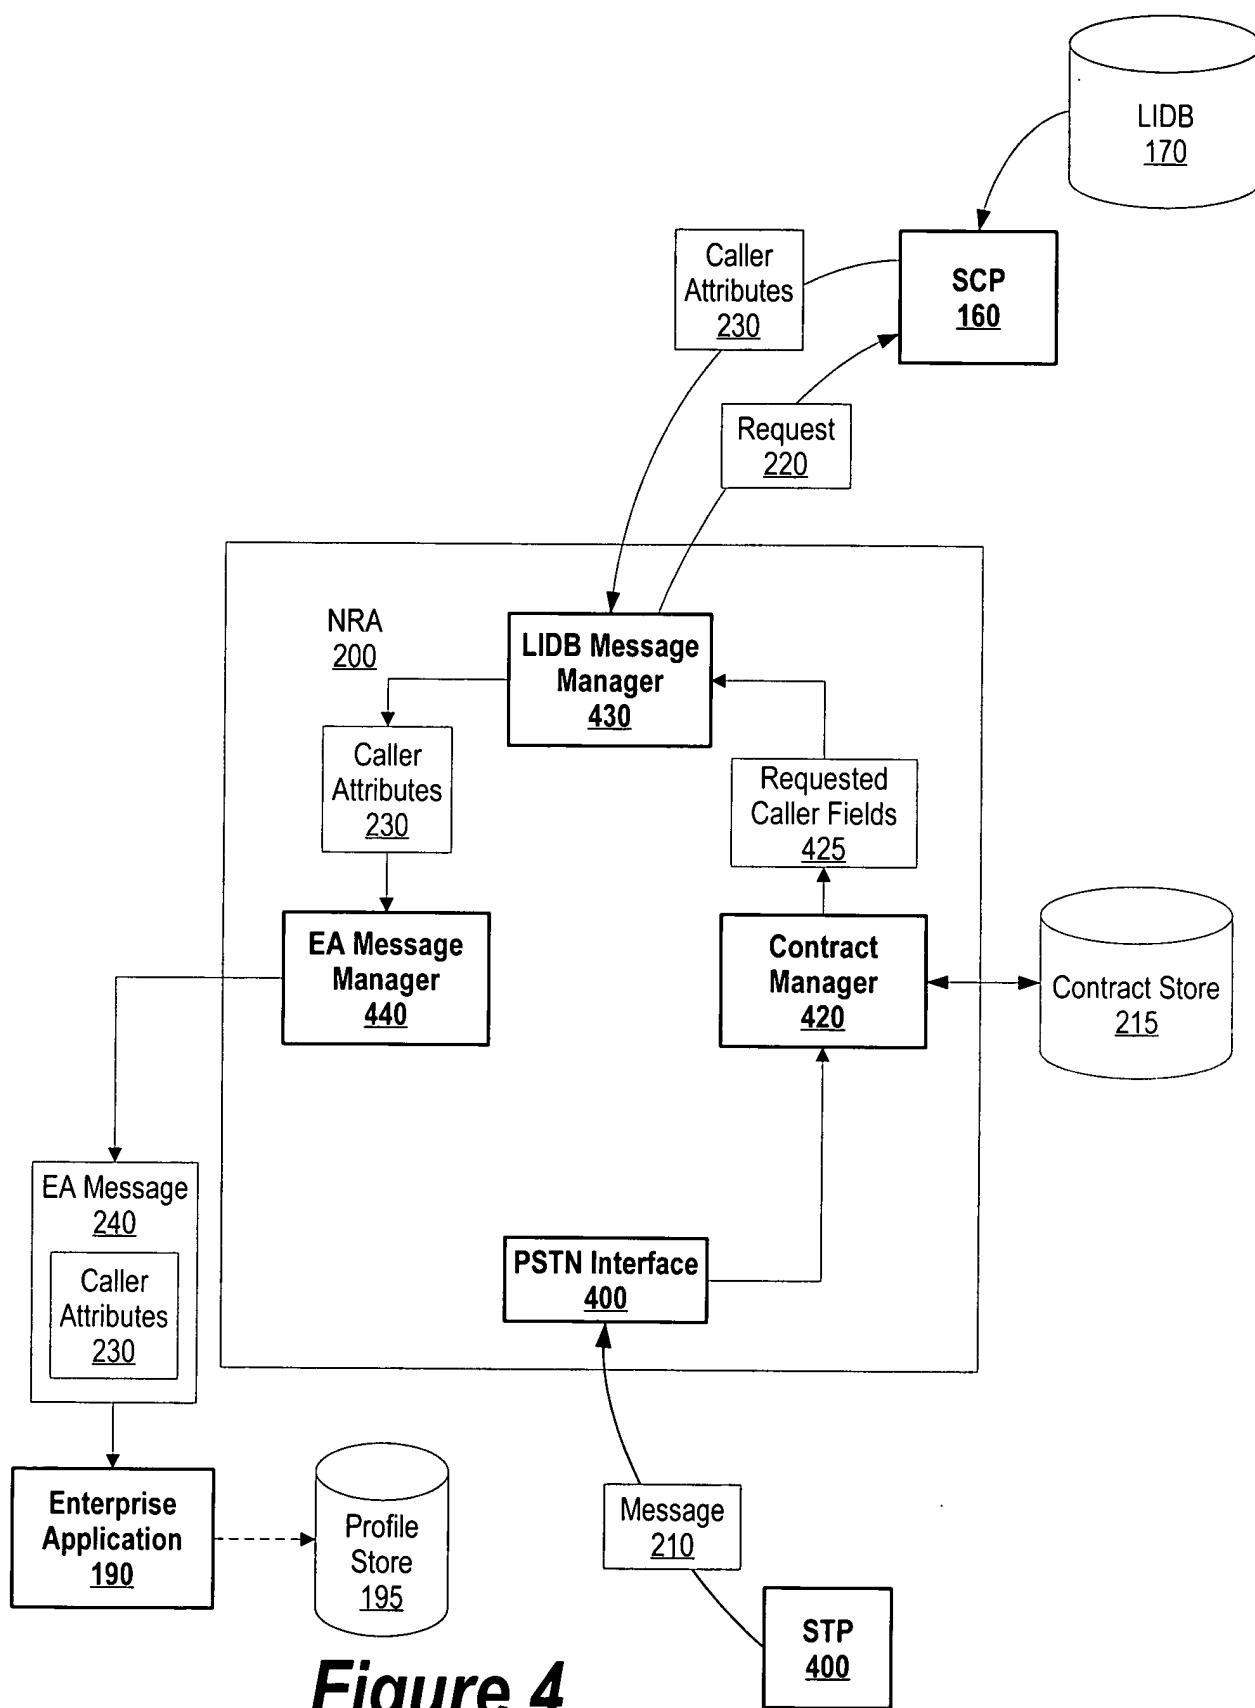
| Initiating Caller Number | Name     | Address         | Alternate Billing | Service Preferences     |
|--------------------------|----------|-----------------|-------------------|-------------------------|
| 512-555-1212             | John Doe | 800 Anytown Dr. | 12324356          | call waiting, caller id |
| 496-123-4567             | Jane Doe | 500 Anystreet   | 989865447         | three way calling       |
| ⋮                        | ⋮        | ⋮               | ⋮                 | ⋮                       |
| 654-987-4321             | Bob Doe  | 310 Court Ave.  | 97844675          | caller id               |

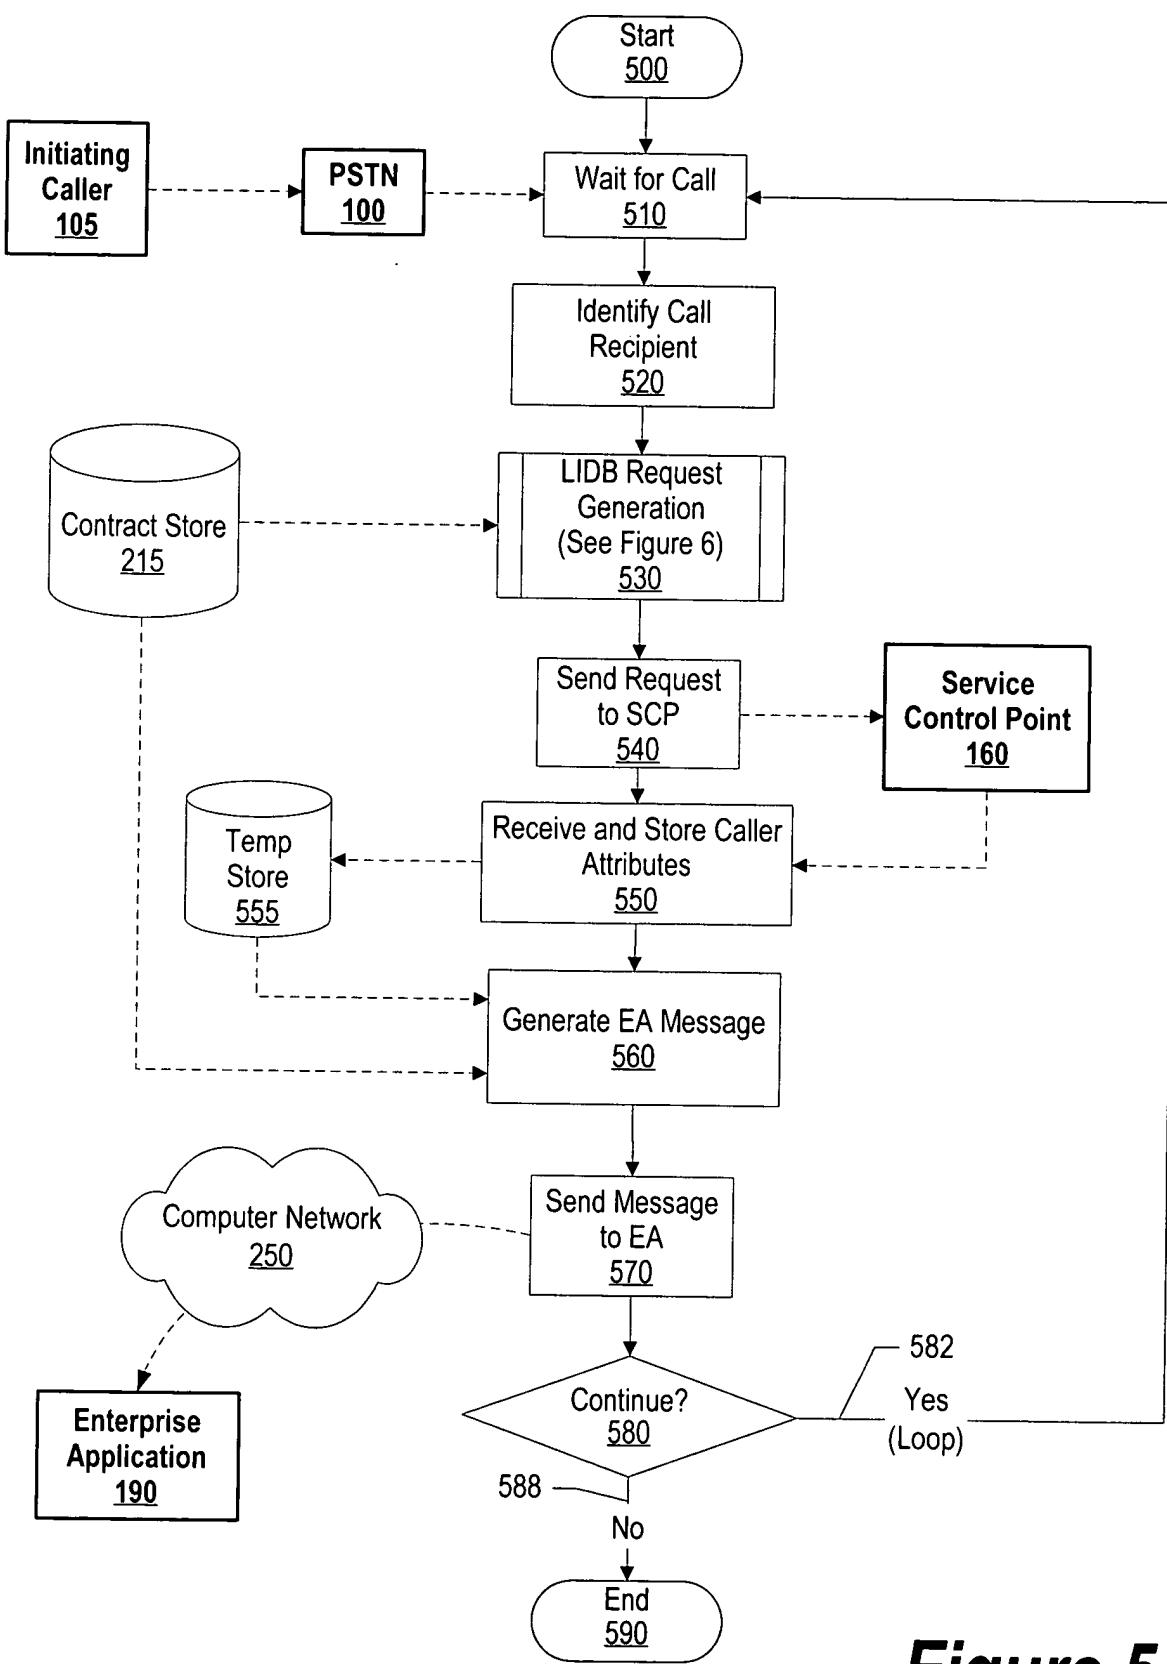
**Figure 3A**

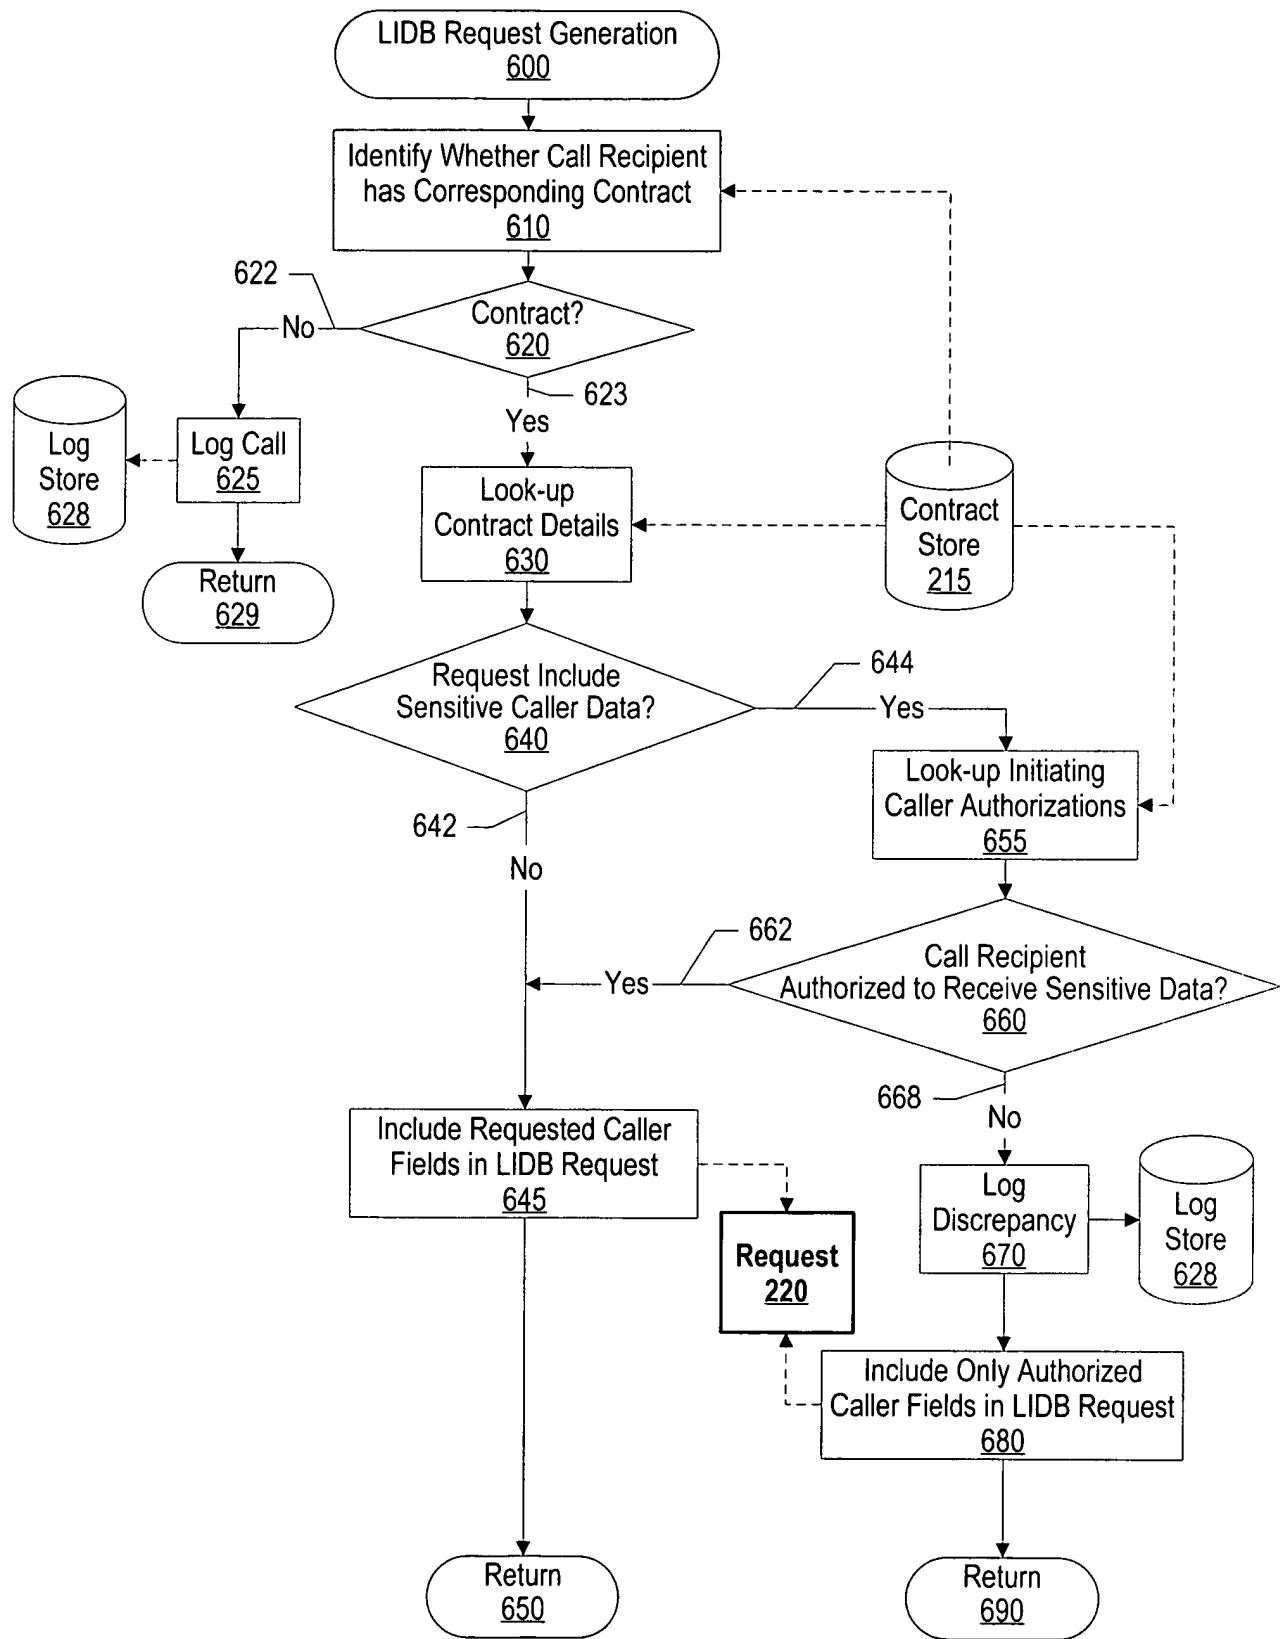
Figure 3B shows a table of call recipient information with three columns: Initiating Caller, Call Recipient, and Authorizations. The table has three rows of data. Callout numbers 350 through 390 point to specific fields in the table rows. Callout 350 points to the top row header. Callouts 360, 370, and 375 point to the column headers for Initiating Caller, Call Recipient, and Authorizations respectively. Callouts 380, 385, and 390 point to the first three data rows. Callout 380 points to the Initiating Caller column of the first row. Callout 385 points to the same column for the second row. Callout 390 points to the same column for the third row. Callouts 360, 370, and 375 also point to the corresponding columns in the data rows.

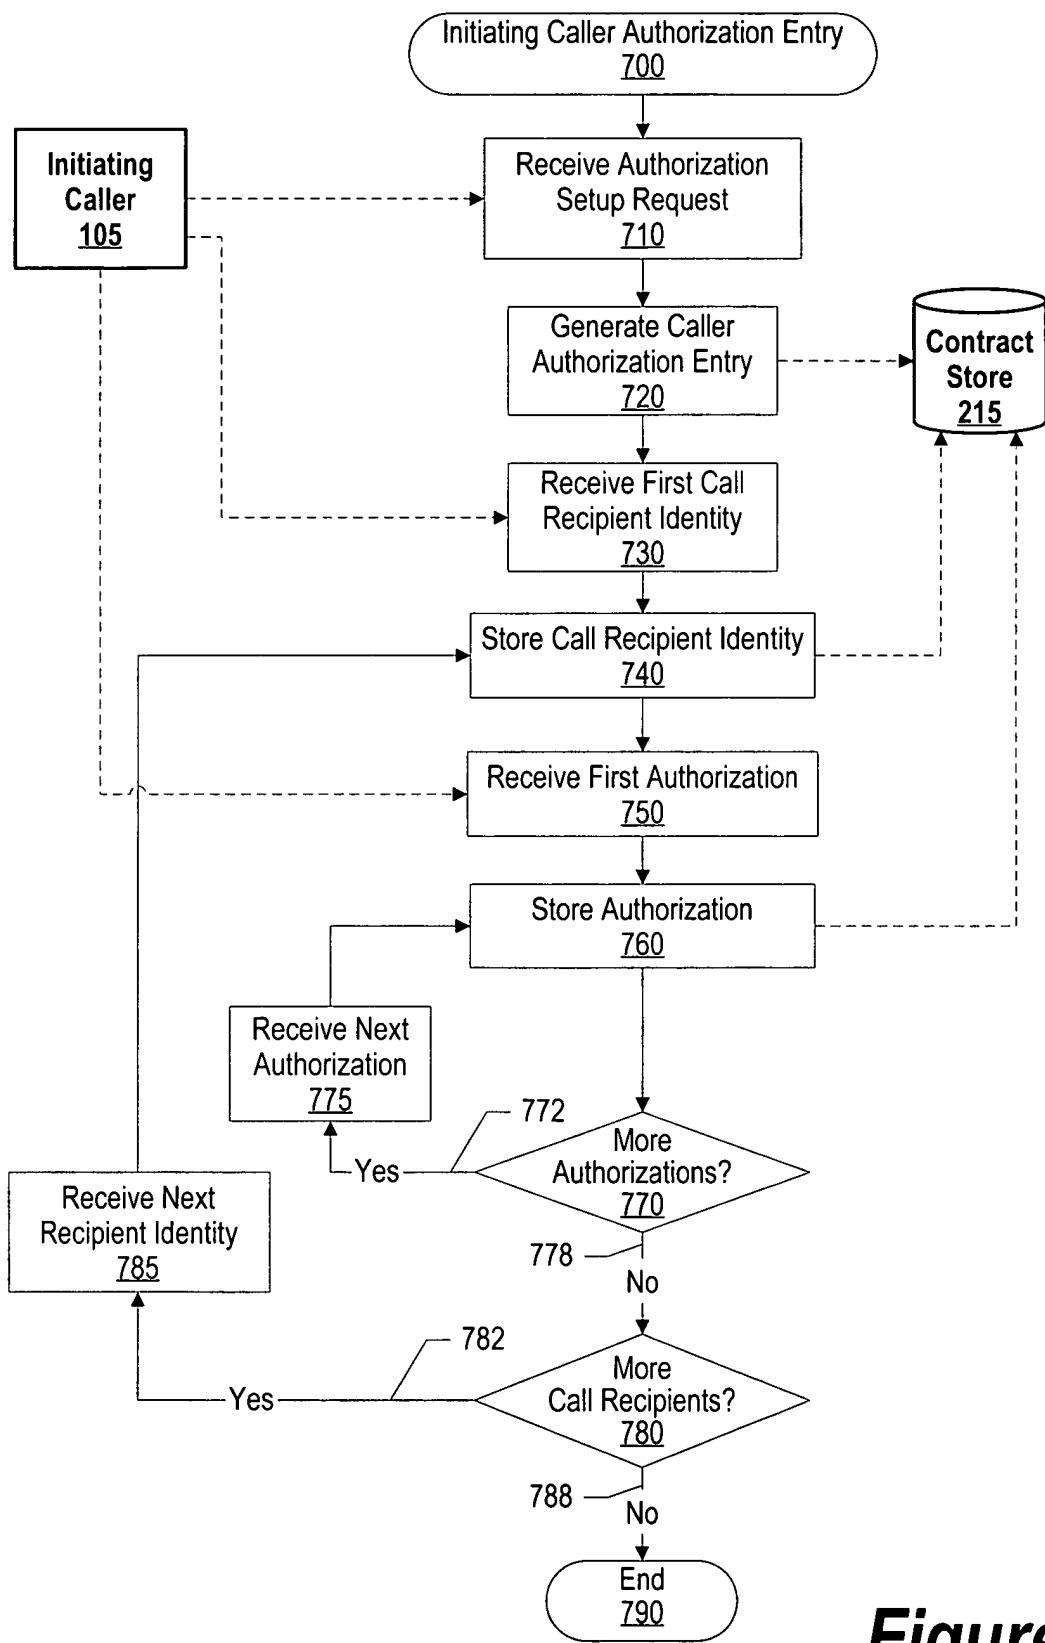
| Initiating Caller | Call Recipient | Authorizations |
|-------------------|----------------|----------------|
| 512-555-1212      | 876-543-0989   | Billing Info.  |
|                   | 656-789-6434   | Birth Date     |
|                   | 467-864-2578   | SSN.           |

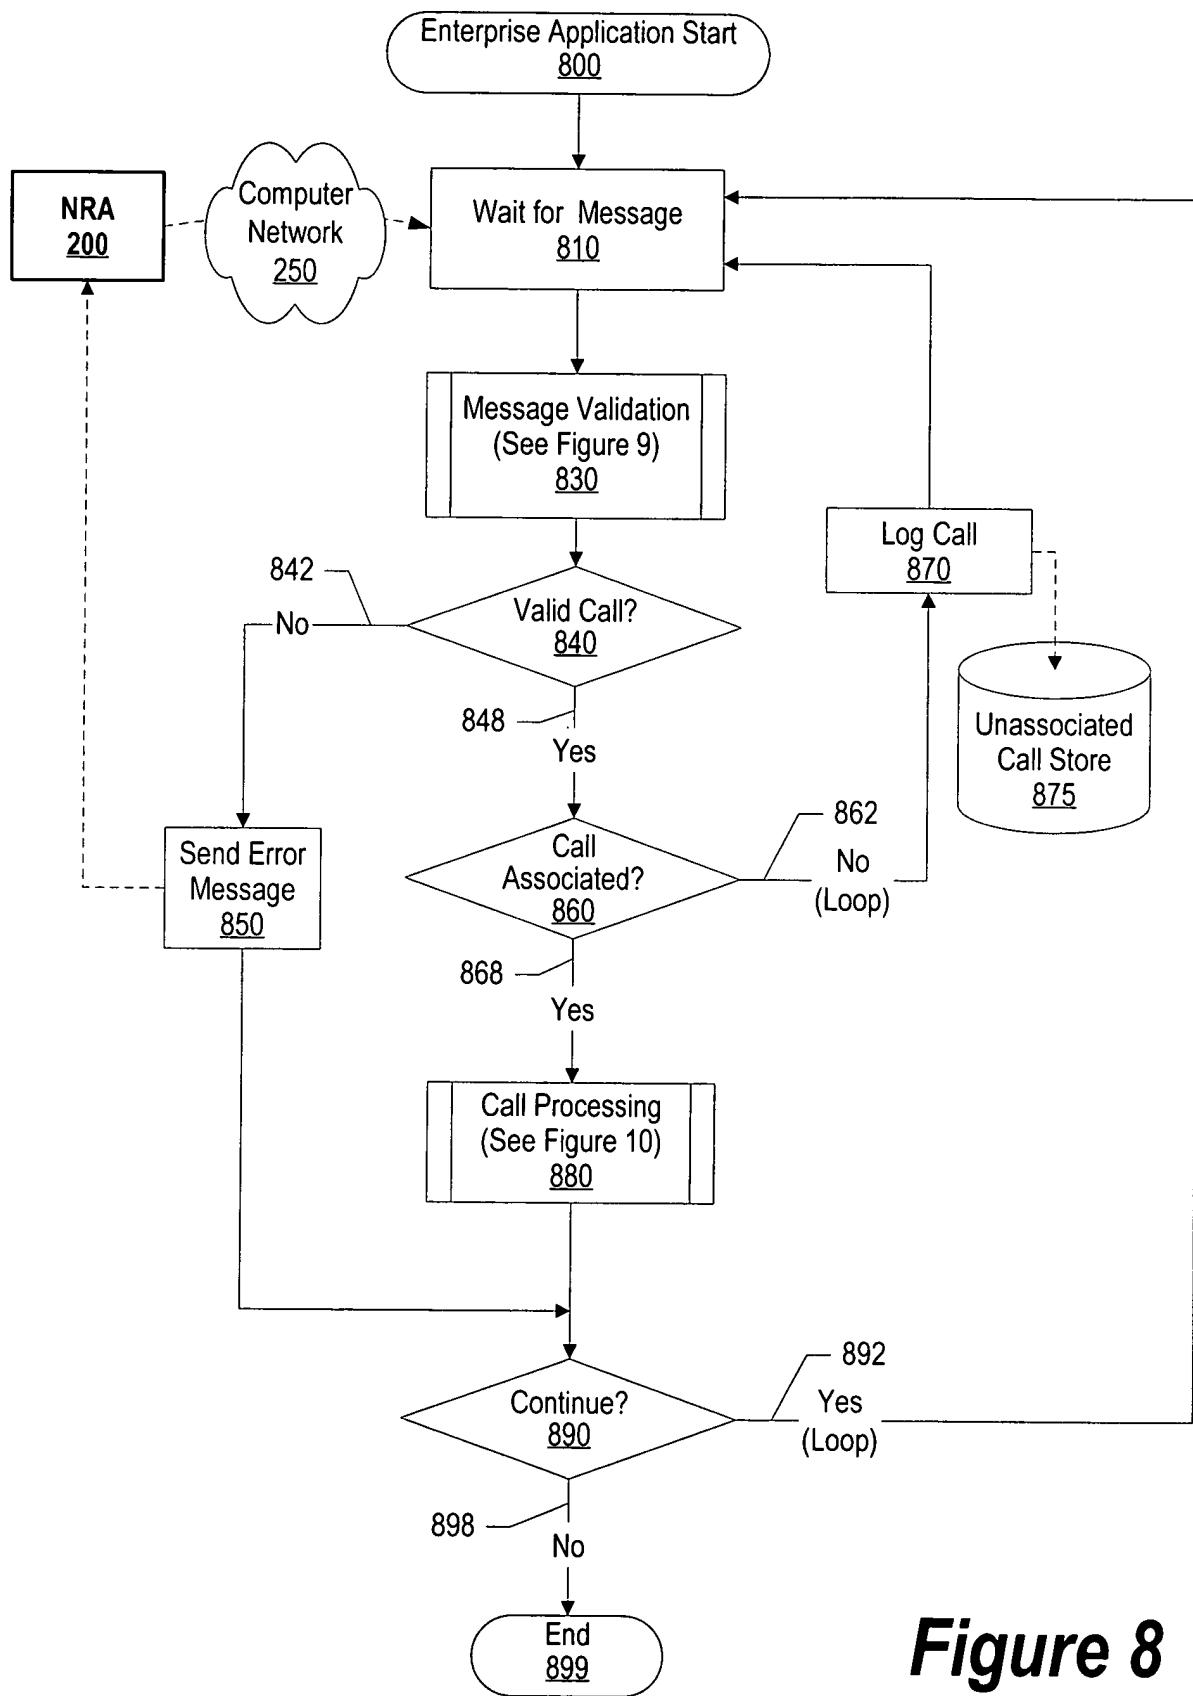
**Figure 3B**

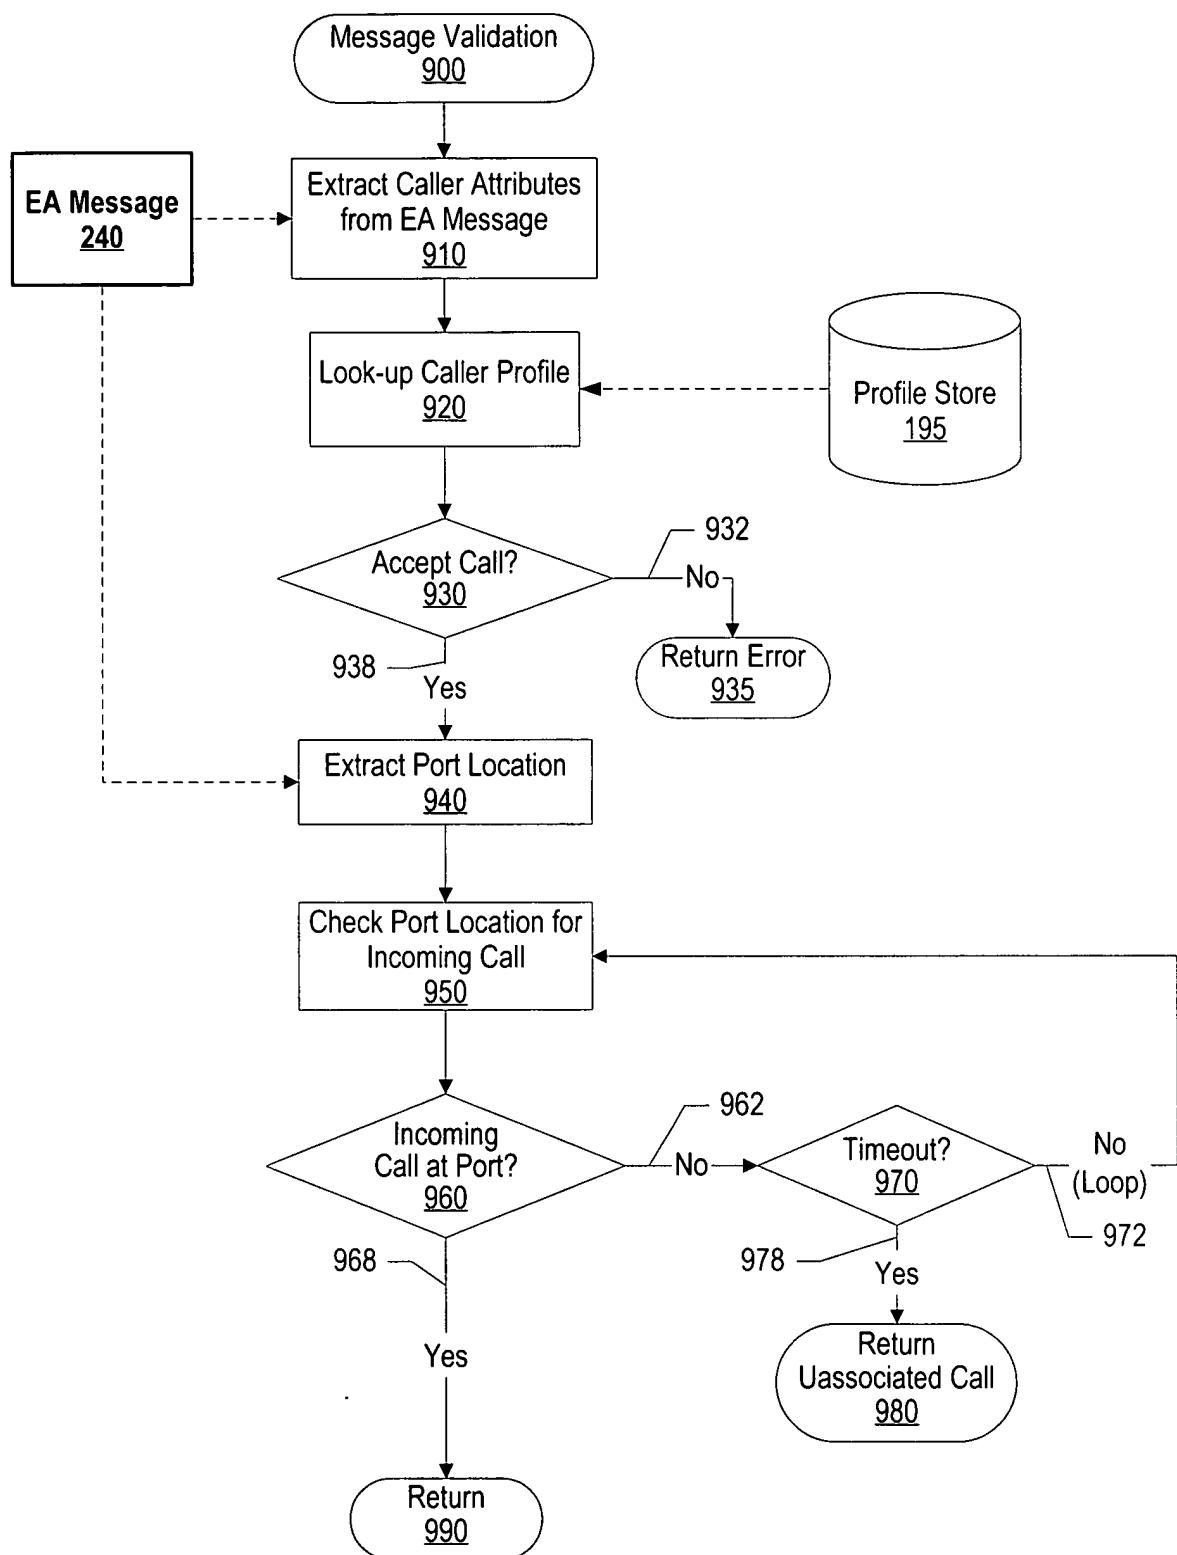
**Figure 4**

**Figure 5**

**Figure 6**

**Figure 7**

**Figure 8**

**Figure 9**

10 / 11

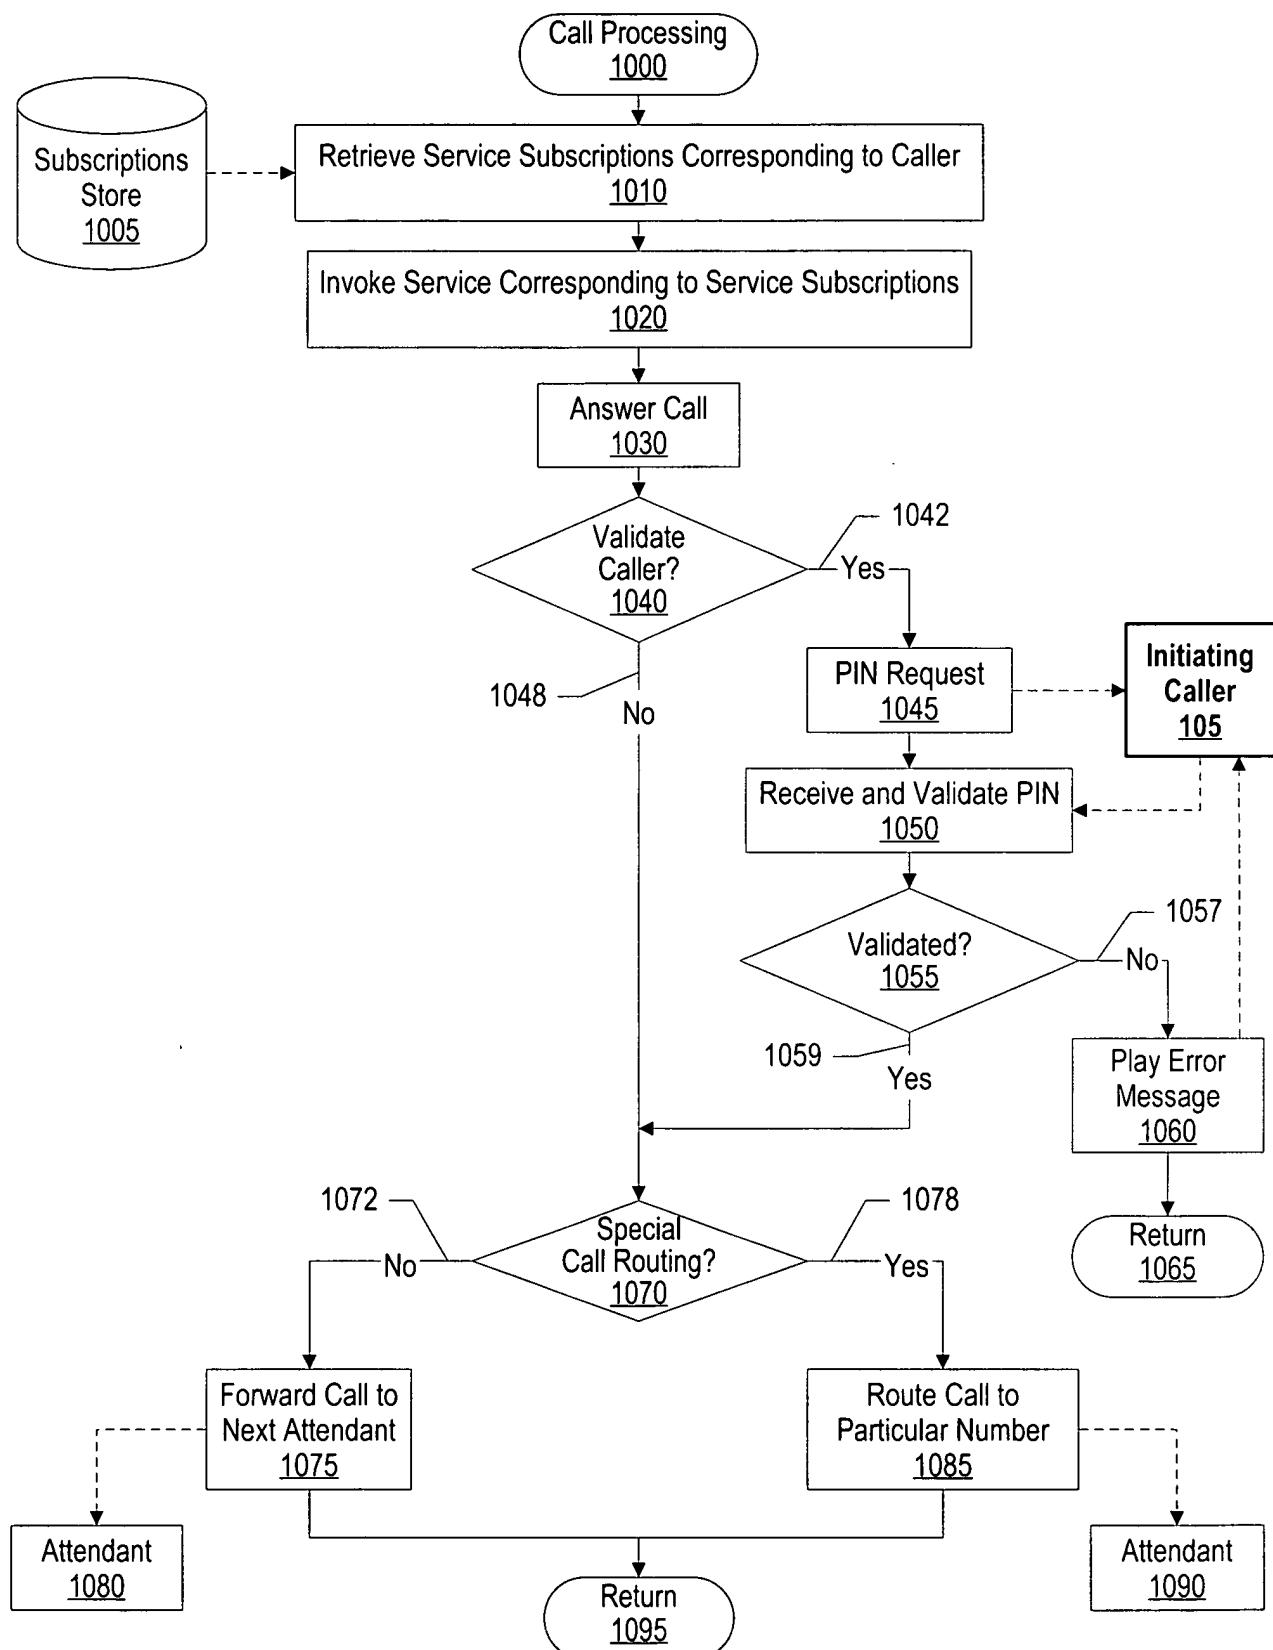
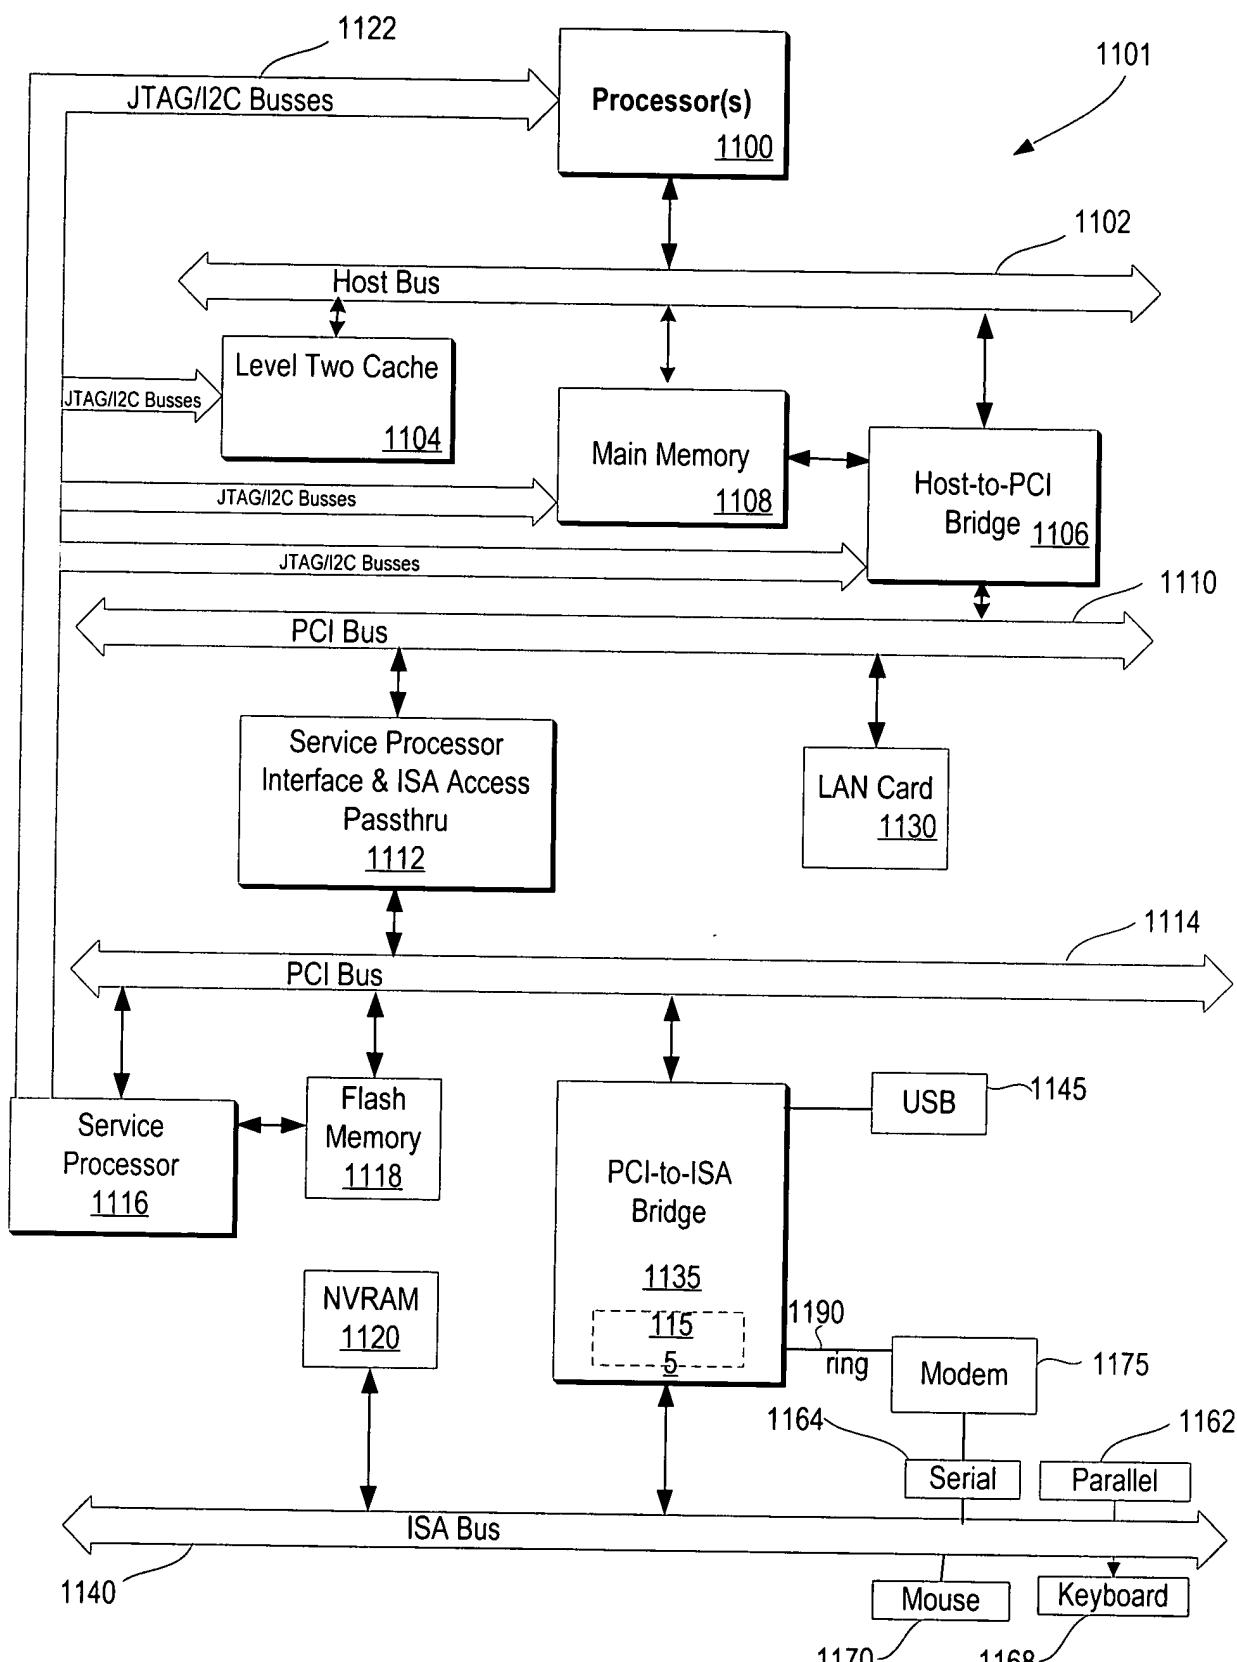


Figure 10

11 / 11

**Figure 11**